




Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

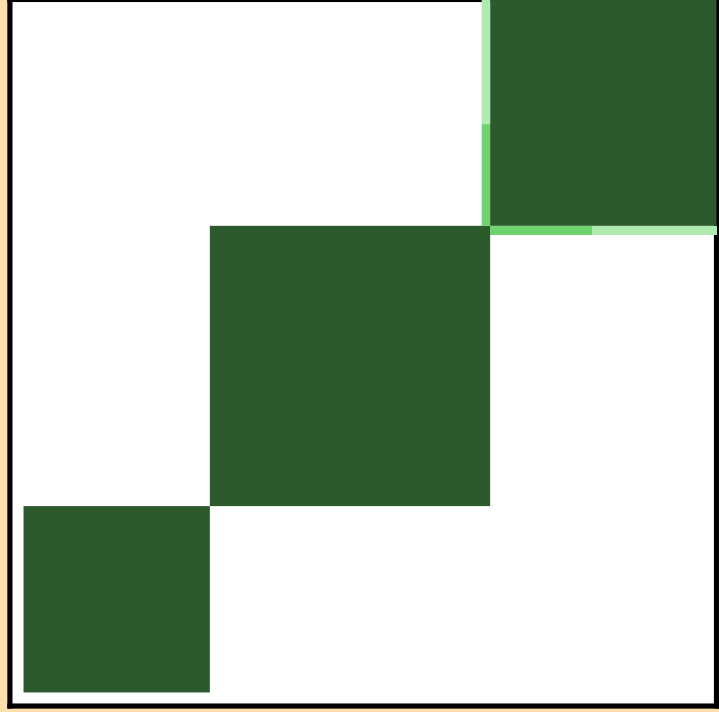



Correlation Matrix

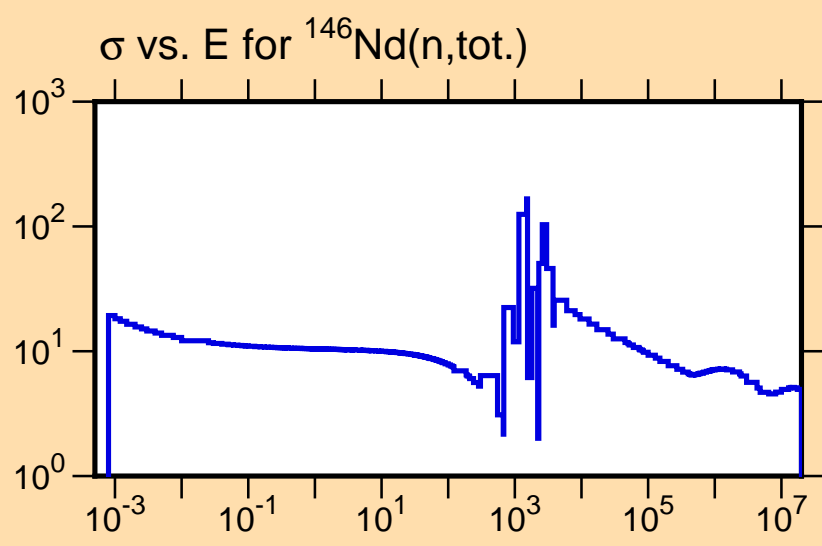

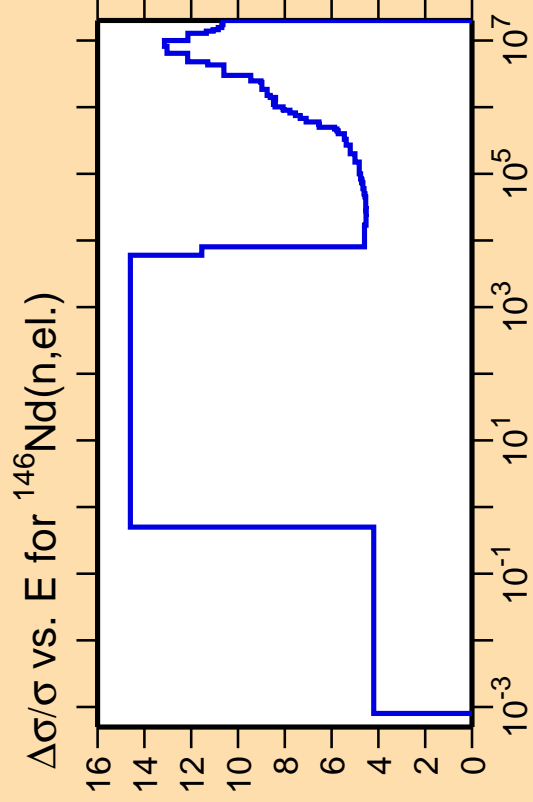



Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

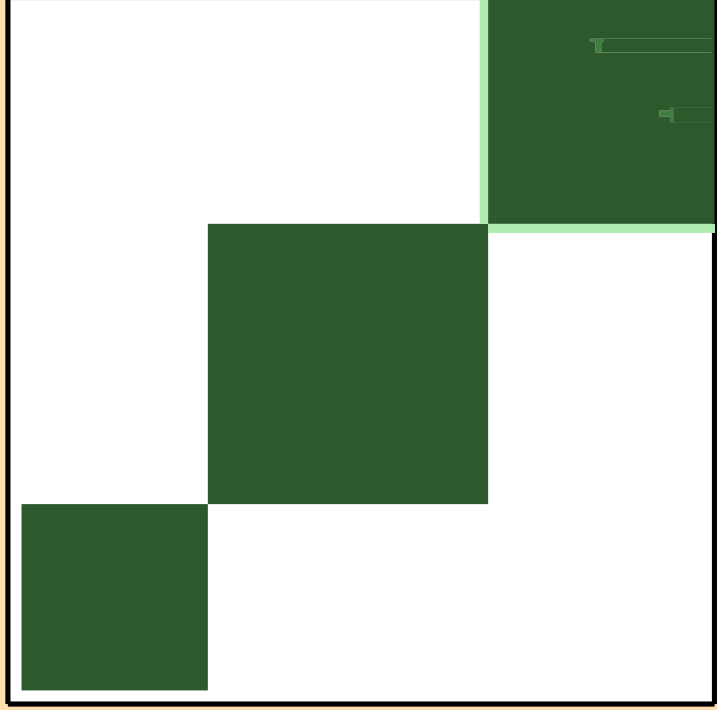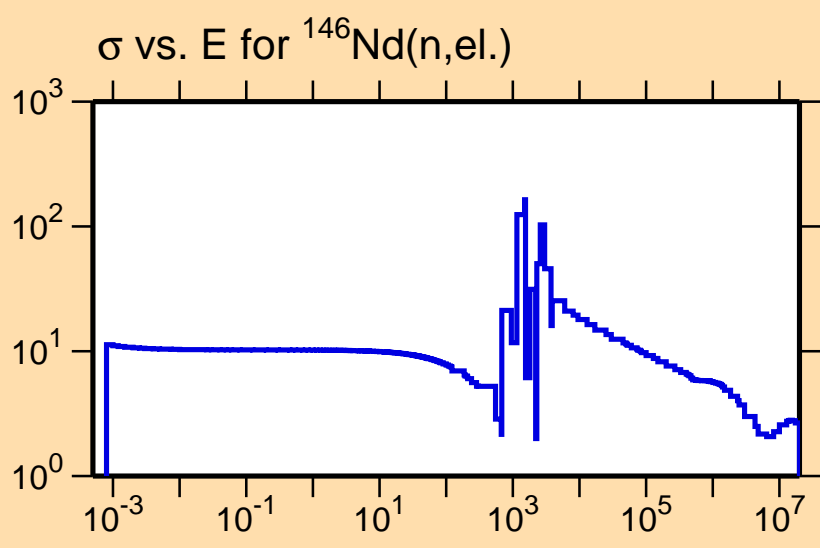



Correlation Matrix

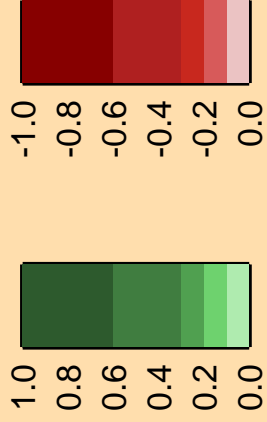

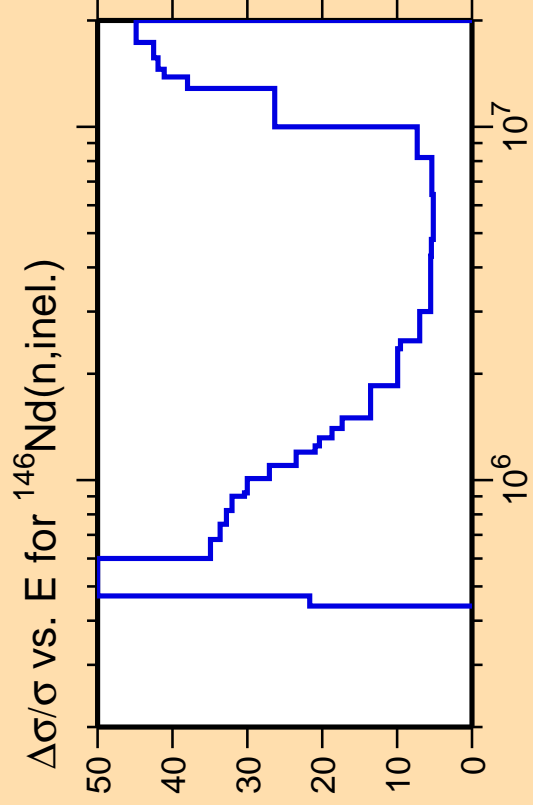

Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

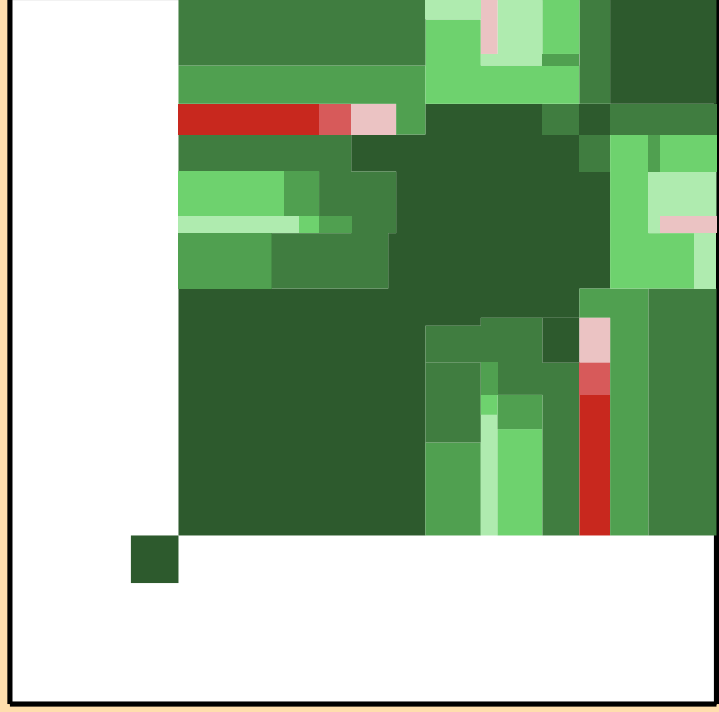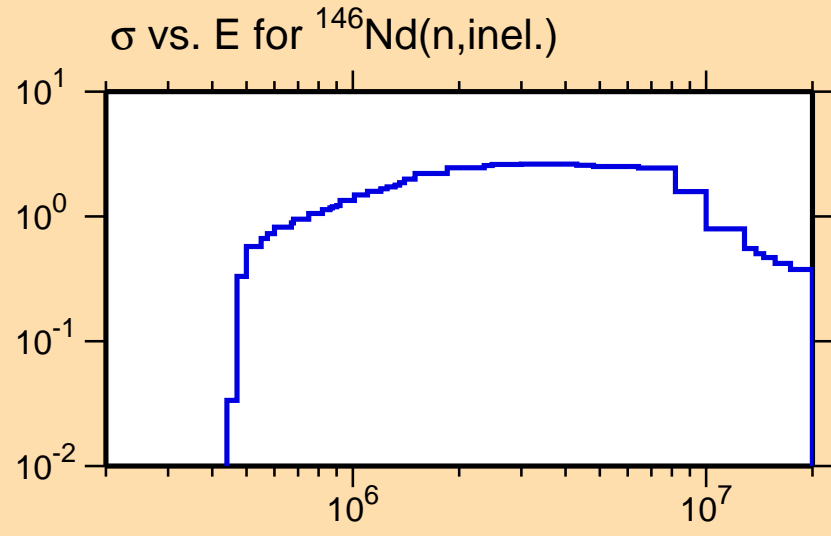

Correlation Matrix




$\Delta\sigma/\sigma$ vs. E for $^{146}\text{Nd}(n,2n)$

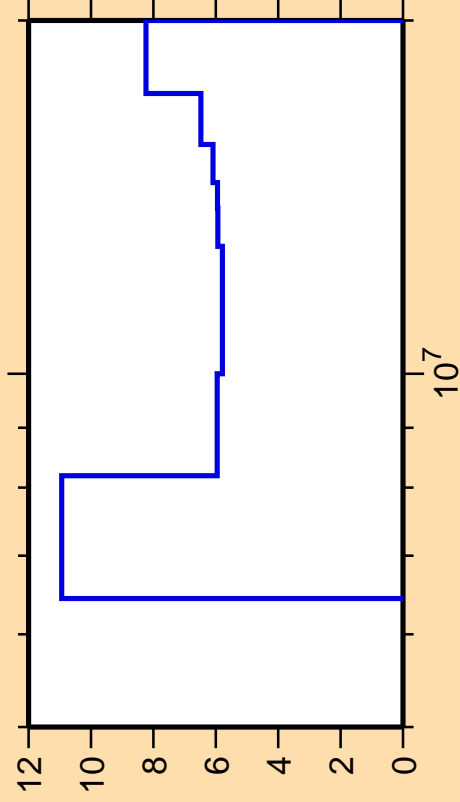

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{146}\text{Nd}(n,2n)$

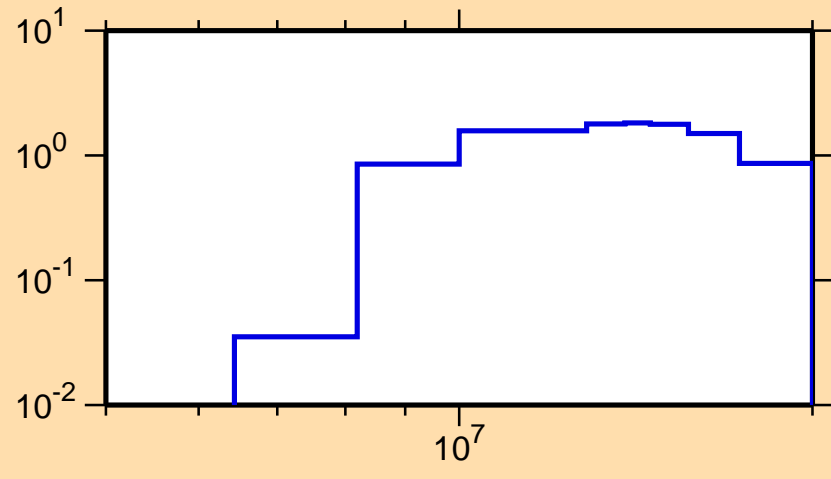

Correlation Matrix





$\Delta\sigma/\sigma$ vs. E for $^{146}\text{Nd}(n,\gamma)$

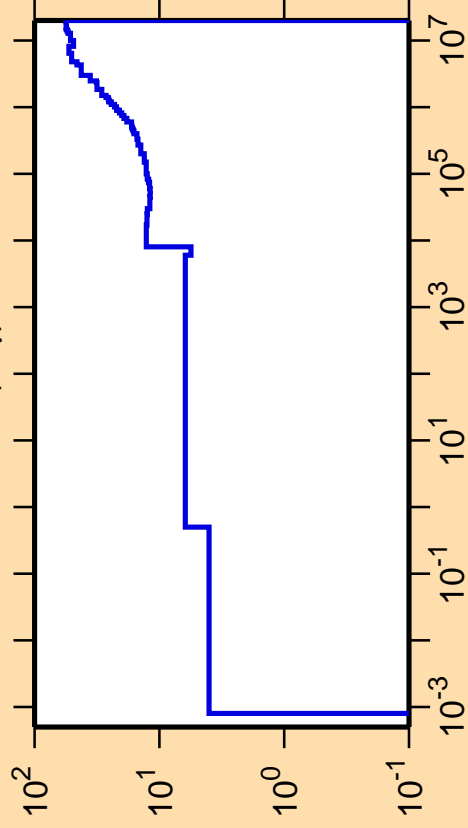

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

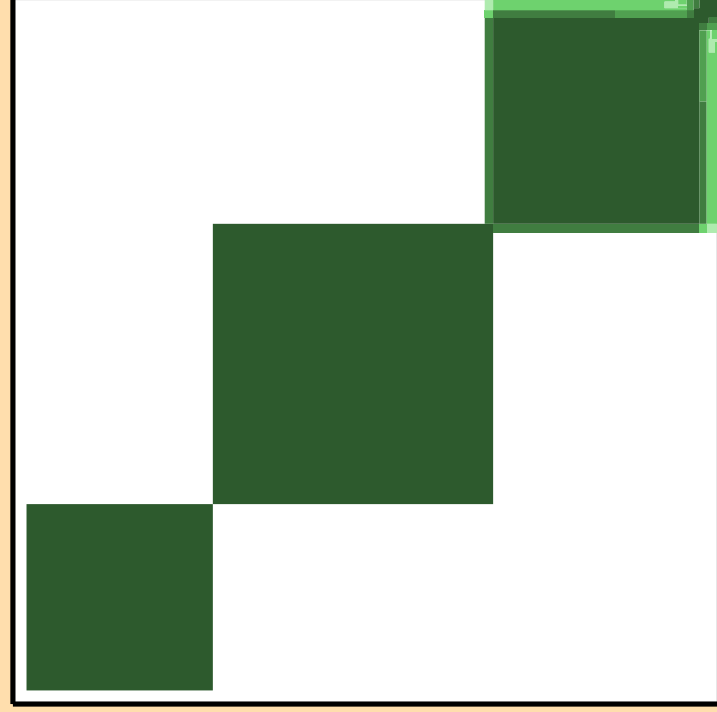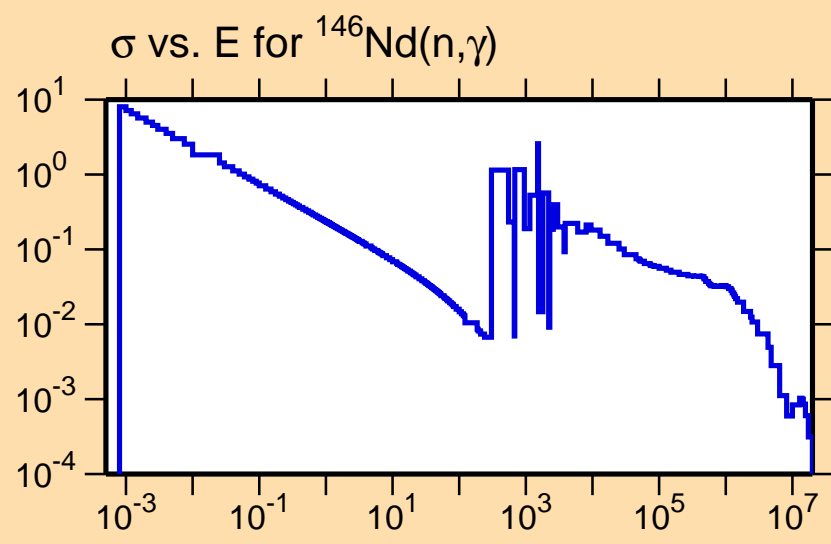

Correlation Matrix

